

## **BMT 964C**

### **Changing Zero Interval from 6 to 24 Hours**

x = Press once

**X** = Press & HOLD 3 sec.

| <b><u>Button</u></b> |                        | <b><u>Screen Displays</u></b>        |
|----------------------|------------------------|--------------------------------------|
| <b>Scroll/Set</b>    | x, x, <b>X</b>         | <b><i>Set Parameters</i></b>         |
| <b>Enter</b>         | x                      | <b><i>Set Units</i></b>              |
| <b>Scroll/Set</b>    | x, x, x, x, x          | <b><i>Other Param.</i></b>           |
| <b>Enter</b>         | x, x                   | <b><i>Zero Interv: <u>06</u></i></b> |
| <b>Scroll/Set</b>    | x, x,                  | <b><i>Zero Interv: <u>26</u></i></b> |
| <b>Enter</b>         | x                      | <b><i>Zero Interv: <u>26</u></i></b> |
| <b>Scroll/Set</b>    | x, x, x, x, x, x, x, x | <b><i>Zero Interv: <u>24</u></i></b> |
| <b>Enter</b>         | x                      | <b><i>Saving</i></b>                 |
| <b>Back</b>          | x, x, x, x             | <b>Back to Normal</b>                |